

BULLETIN # B008

REMOVAL OF THE ATL-1 OR ATL-2 LOWER MOTOR UNIT

You will need:

- Standard blade screwdriver

Procedure:

1) Remove the Upper Head of the ATL from the Lower Motor Unit as described in *Bulletin # B005A for ATL-1,2,2+, and 3.*

2) **Disconnect the main power cord from the electrical outlet!**

NOTE: If the thumb nuts are too tight, you may need to loosen them with a screwdriver.

3) Remove the four (4) thumb nuts located underneath each corner of the motor unit on the outside of the black trough. You will see four large slotted thumb nuts.

NOTE: If the thumb nuts are too tight, you may need to loosen them with a screwdriver.



4) You may now remove the lower motor unit by lifting it out of the trough.